



BMS16Pro

for 2S-16S LiPo & LiFe

Low power consumption

High accuracy

2.8" TFT LCD display

Programmable



Thanks for your purchasing the BMS16Pro for your vehicle.

Read the ENTIRE instruction manual to become familiar with the features/functions of the device before operating.

Feel free to send an email to jasonwang3a@163.com or call at 86 755 2643 6165 should you have any questions and suggestions.

Jason Wang



Chargery BMS16Pro is designed special for LiPo & LiFe battery pack applied to storage energy system and Electrical Vehicle including E-Motorcycle, E-Scooter and so on. The unit can measure or detect the battery voltage, cell voltage, charge & discharge current, battery temperature, and battery SOC (State of Charge) , displayed with TFT color LCD.

Safety Notes

Please read the entire manual completely before using, to make sure you can use this device better and more safely.

1. Ensure the BMS program and settings match the battery pack, otherwise the battery will be damaged and a dangerous situation may arise, especially for Lithium batteries, which may cause fire.
2. For storage energy system application and for Electrical vehicle application will have many differences, please adjust those key parameters carefully, or contact us for more details.
3. Do not allow water, moisture, metal wires or other conductive material into the device.
4. Never charge or discharge any battery having evidence of leaking, expansion/swelling, damaged outer cover or case, color-change or distortion.
5. Do not try to charge "non-rechargeable" dry cells.
6. Do not mix batteries of different types, different capacities or from different manufacturers.
7. Do not exceed the battery manufacturer's suggested maximum charge and discharge rates.
8. Carefully follow the battery pack manufacturer's recommendations and safety advice.

Copyright

Copyright@ Chargery Power Co., Ltd. All rights reserved.

Without prior written consent by Shenzhen Chargery Power Co., Ltd, any units or individual extract and copy parts or entire contents of this manual, and transmission in any form is illegal and strictly prohibited.

The product described in this manual, may include copyright software ownership belonged to Shenzhen Chargery Power Co., Ltd and its licensee, except getting the permission from relevant rights holders, otherwise any copy, distribute, modify, excerpt, decompile, disassemble, decrypt, reverse engineering, lease, transfer, sub-license, as well as other acts of infringement of software copyright is strictly prohibited, but apart from the restrictions prohibited by applicable law.

Special Features

1. The BMS16Pro uses advanced ADC measurement technology, high accuracy, high voltage and high current detection circuit. The maximum voltage measurements tolerance is within 5mV at up to 16S LiPo battery 69V)
2. Support regenerative braking, during braking operation can charge the batter pack and the discharge power (Wh) will decrease to response to the braking power.
3. Charge/discharge current up to 600A. Bigger current can be customized.
4. **1.2A** per cell balance current is very useful for large capacity battery pack, the feature can resume all cell voltage balance status at the shortest time. over temperature protection make sure the system safety during balance.
5. BMS16Pro calculate and display the charge and discharge power (Wh), generally the battery rated power is rated voltage multiply rated battery capacity.
6. TFT LCD screen provides rich information including current, voltage, power, capacity, battery status, SOC and temperature and so on.
7. BMS16Pro features a maximal safety protection, within the range parameters can be setup, BMS16Pro will alarm and cutoff charge or discharge according to users' setup, out of range of parameters, and triggered


absolute maximum ratings BMS16Pro will force to cutoff charge or discharge to prevent the battery from fire.

8. Minimize the power consumption by draw current from all cells or external power supply.
9. Dual power design, the unit can be powered by all cells or external power supply.
10. Detect cell count at any time, and compare with the count detected when switch on first time. If it is not uniformity, the device will alarm and cutoff charge or discharge according to users' setup, the feature can prevent any cell connection from losing.
11. Sound alarm and LED alarm will be triggered when any warning events happened, and then wait several seconds cut off or NOT charge or discharge. The delay time can be programmed.
12. Charge relay and discharge relay are controlled independently.
13. Two temperature sensors monitor battery temperature on different location.
14. Supports upgrading the firmware program by USB port.
15. BMS16Pro provide users the maximal flexibility, key parameters can be programmed.
16. BMS16Pro display battery SOC or called battery gauge similar with car dashboard. Cell count, battery pack voltage and battery gauge (%) is displayed simultaneously.
17. In case that the battery pack need not be charged and discharged, Press STOP button enter into sleep mode to save energy consumption. Charge and Discharge is cut off, LCD back light is off. Press any key to resume normal work mode.
18. LCD back light ON time can be programmed to save energy, when it is OFF, press any key to resume "ON".

Protection functions

1. Cell count error protection
2. Over charge protection
3. Under voltage protection
4. Over current protection when charge or discharge
5. Over temperature protection
6. Over differential cell voltage protection
7. Over differential battery temperature protection
8. Under SOC protection

Interface


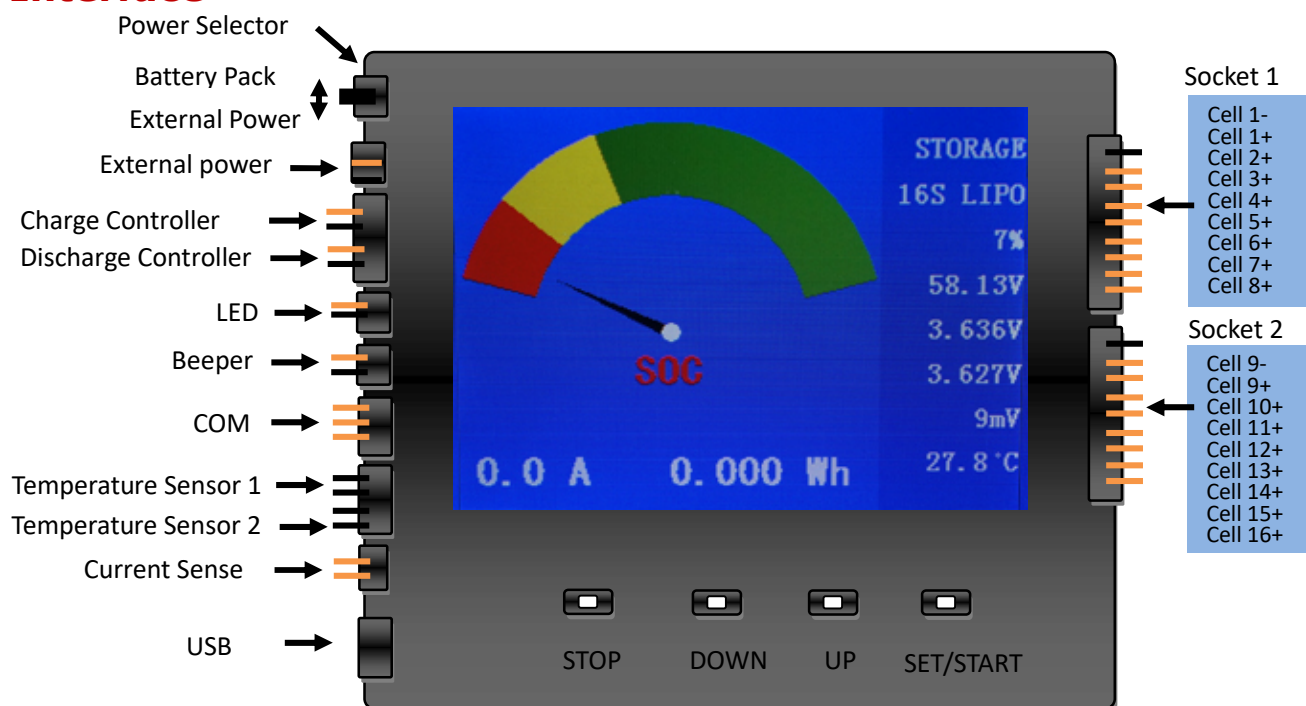


Power Selector	Alternate External or battery pack to power BMS16Pro. If select all cells power the unit, the battery pack must be 8S to 16S LiFe or LiPo. But if power by external power supply, BMS16Pro can do 2S-16S LiPo or LiFe battery pack. The main input supply Vin voltage range is 15V to 60V
External power port	External power input, the voltage should be 15V to 60V, 1A maximal, the current depends on the external load, the connector is 5.5*2.1 DC jack
Charge controller	Charge controller, turn on or turn off charge circuit, generally connect to relay or DC contactor. When any cell voltage is over setup, it will not power the coil of relay and turn off the charger, otherwise BMS16Pro will output Vin power the coil to close the relay. The relay must be form OPEN.
Discharge controller	Discharge controller, turn on or turn off discharge circuit, generally connect to relay or DC contactor. When any cell voltage is under setup, it will not power the coil of relay to turn off the motor or other load, otherwise BMS16Pro will output Vin power the coil to close the relay. The relay must be form OPEN.
COM	The COM port is connected to external device such as Charger. if connect to Chargery charger, BMS16Pro can control charge current to shorten charge time
Temperature sensor	Two temperature sensor monitor the battery temperature, the sensor must tie to battery surface or gap of cells where the temperature should be the highest during charge or discharge. The temperature range is 0-150℃
LED	Connect to high light LED, the LED will flash when any warning event happened
Beeper	Connect to beeper or others to alarm. It will output 12V 25mA max.
Current sense	Connect to single shunt. Charge current and discharge current can be measured simultaneously.
USB	Connect to PC update the firmware by Chargery UpdateTool.exe
Socket 1	Connect to 2S to 8S battery,
Socket 2	Connect to 9S to 16S battery. for over 8S battery, please connect 8S battery to socket 1 and then connect to socket 2, such as 8S + 2S for 10S and 8S +5S for 13S

Absolute maximum or Minimum ratings

Maximal cell voltage	LiPo	4.35V	Larger than the absolute maximum voltage, BMS16Pro will force to cut off charge
	LiFe	3.90V	
Minimum cell voltage	LiPo	2.50V	Less than the absolute minimum voltage, BMS16Pro will force to cut off discharge
	LiFe	2.00V	
Battery temperature	LiPo& LiFe	100℃	Over the temperature, BMS16Pro will force to cutoff the charge and discharge

Program Setup

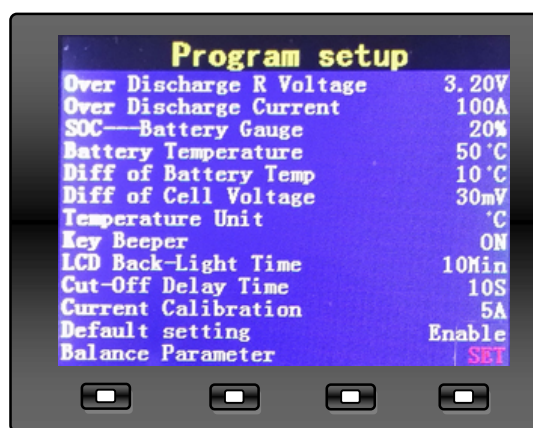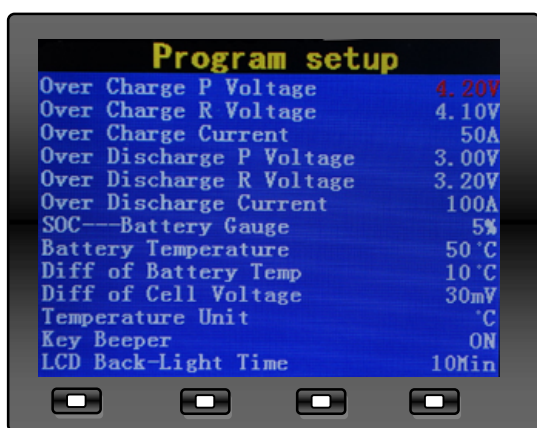

- Press **SET/START** button for 3 seconds enter into Program Setup interface.
- Press **UP** or **DOWN** button select the item, press **SET/START** shortly make the value flash, and press **UP** or **DOWN** change the value. Press **SET/START** button shortly confirm the change. After finish all setup, press **SET/START** for 3 seconds quit the setup menu.
- When quit setup mode, BMS16Pro Will remember all parameters till next change.

NOTE: Please keep the default setup unless for special purpose.

Parameters		Min.	Type	Max.	Step	unit
Charge Protection						
Over Charge Protection(P) Voltage	LiPo	3.90	4.20	4.35	0.01	V
	LiFe	3.40	3.65	3.90	0.01	V
Over Charge Release(R) Voltage	LiPo	3.80	4.10	4.25	0.01	V
	LiFe	3.30	3.55	3.80	0.01	V
Over Charge current		0	50	600	1	A
Discharge Protection						
Over Discharge Protection(P) Voltage	LiPo	2.75	3.00	4.00	0.01	V
	LiFe	2.00	3.00	3.50	0.01	V
Over discharge Release(R) Voltage	LiPo	2.75	3.20	4.00	0.01	V
	LiFe	2.00	3.10	3.50	0.01	V
Over Discharge current		0	300	600	1	A
SOC--- Battery gauge		5	20	90	1	%
Temperature Protection						
Battery Temperature		30	50	80	1	℃
Difference(Diff) of battery Temperature(Temp)		5	10	30	1	℃
Voltage balance Protection						
Difference(Diff) of cell voltage		5	30	300	1	mV
Others						
Temperature Unit			℃	℉		
Key Beeper			ON	OFF		
LCD Back-Light time ⁽¹⁾		1	10	999	1	min
Cut-Off Delay Time ⁽²⁾		0	10	60	1	Second
Current Calibration ⁽³⁾		0	0	255	5	A
Default settings	Press SET/START restore all parameters to default value					
Balance Parameter setup, Press SET/START to setup and press for 3 seconds quit setup						
Balance Start Voltage	LiPo	3.3	3.6	4.1	0.01	V
	LiFe	3.0	3.2	3.4	0.01	V
Balance Stop Diff Voltage ⁽⁴⁾			5	10	200	mV
Balance in Charge	ON means Balance start during charge, OFF disable.					
Balance in Discharge	ON means Balance start during discharge, OFF disable.					
Balance ⁽⁵⁾	ON enable Balance, and OFF forbid balance					

NOTES:

- Always on** means the LCD back-light will be ON forever.
- NO** means BMS16Pro will not cut off charge or discharge but alarm by LED flash and Beeper Sound.
- Current Calibration** is not recommended, voltage and current is calibrated before delivery. if exchange current shunt, you must calibrate the current again.
- When difference of cell voltage under setup, balance stop automatically




- Balance current: 1.2A per cell, default Balance is ON, please alternate OFF, otherwise the BMS don't balance at any situation.

Warning

Cut-Off Delay Time is very important and difference for different battery capacity and application, please carefully test and make a correct decision, for EV, you can select **NO** to control the EV car by manual **NOT** controlled by BMS16Pro, but when cell voltage and temperature trigger the absolute maximum or minimum ratings, the BMS16Pro will force to cut off charge or discharge to make sure the battery safety, and prevent battery pack from explode or fire.

Operating guideline

- Connect Beeper, LED, and Current Sensor to BMS16Pro, and then connect relay Controller and temperature sensor too.
- Connect the battery to BMS16Pro keep the cell polarity correct. The detailed connection diagram is as the following typical connection drawings. move the power selector power on the device.
- BMS16Pro Will initialize the beeper and LED, beeper sounds once time, after display BMS16Pro and version, the battery type and cell count interface is displayed. Two battery type LiPo and LiFe can be selected. Cell count range is 2S to 16S, the cell count will be identified when the battery pack connect to the BMS16Pro. Press **DOWN** or **UP** button choose the item and press **SET/START** blink, then press DOWN or UP button changed, finally press START button to run the BMS16Pro. After started, battery type and cell count will not be changed unless power off BMS16Pro.
- Press **SET/START** button for 3 seconds enter into Program Setup interface, modify Over Charge Current (50A default) and Over Discharge Current (300A default) according to your application. If need balance in Charge or in Discharge, please modify the Balance set on Program Menu.
- SOC—battery gauge dashboard will be displayed first, as following. Press **UP/DOWN** button alter other interface.

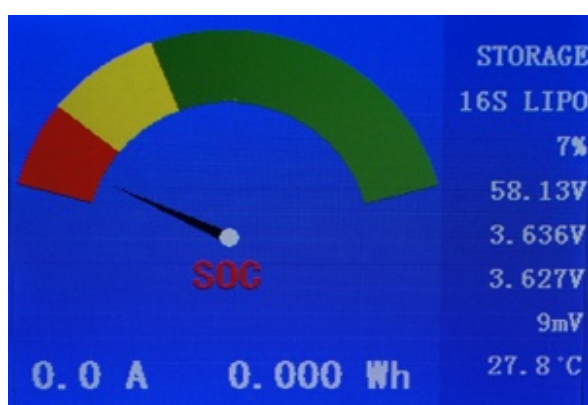

Charge or discharge
current

Charge or discharge
power

STORAGE is battery status, maybe CHARGE or DISCHARGE ⁽¹⁾

Cell count and battery type

SOC—battery gauge, display 0% lose temperature sensor

Battery pack voltage

Highest cell voltage

Lowest cell voltage


Difference of cell voltage

Battery temperature

Notes

- When charge or discharge current less than 1.0A, battery status will be STORAGE.


- The following interface is cell voltage column, the highest and the lowest cell voltage is displayed in RED column.

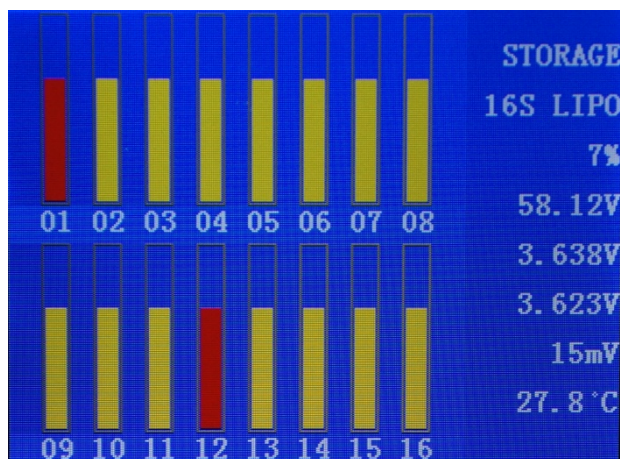

7. The third interface display all information including all cell voltage. The highest and the lowest cell voltage is displayed in RED text. Difference of cell voltage and difference of battery temperature is displayed. When any warning events triggered, BMS16Pro will go to the interface and display error information. Such as if the battery connection bread down, the cell count and ERROR will be displayed in turn. if the cell voltage over the setup value, the cell voltage and HIGH will be displayed in turn.
8. When any warning events triggered, Press UP or DOWN, you can check the cell voltage triggered warning events (over charger or over discharge), the voltage will be recorded till next warning.

Specifications

1. Battery range: 2S-16S LiPo & LiFe battery pack
2. Accurate scope of the cell voltage: -5mV/+5mV
3. Cell Voltage display range: 0.10~4.99V
4. The voltage of external power: 15-60V
5. Balance current:1.2A per cell
6. Temperature display range:0.0°C~150°C,
 - Display 0.0 when under 0.0°C
7. SOC indicator:
 - RED area @ 0~15% of SOC
 - YELLOW area @ 16~35% of SOC
 - GREEN area @ 36~100% of SOC
8. Size: 128×114×33 (L×W×T, mm) or 5.1×4.5×1.3 inch (L×W×T, mm),
9. Weight: 500g with case
10. Warning LED: 11000mCd, @ 2.0V, 20mA
11. Warning beeper: 85dB @ 12V, 25mA
12. Package: AL alloy case

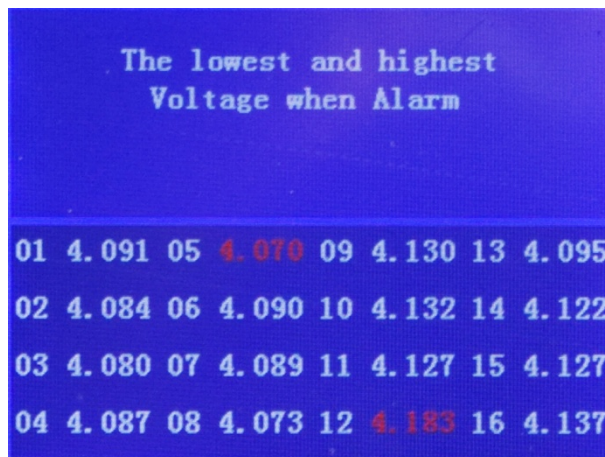

Balancer



BMS16Pro can resume cell voltage balanced status at the shortest time, it is based on 1.2A balance current per cell, balance accuracy is 5mV. Balance can be operated in charge or in discharge or in both, the feature can be setup on program setup menu.

Current Sensor Specifications

Please use correct current shunt according to actual maximal charge and discharge current, single shunt is enough for BMS24, 75mV or less shunt is suggested.


Chargery can provide all kinds of shunt. we calibrated cell voltage and current before delivery.

The 300A and 600A 75mV specification is as below.

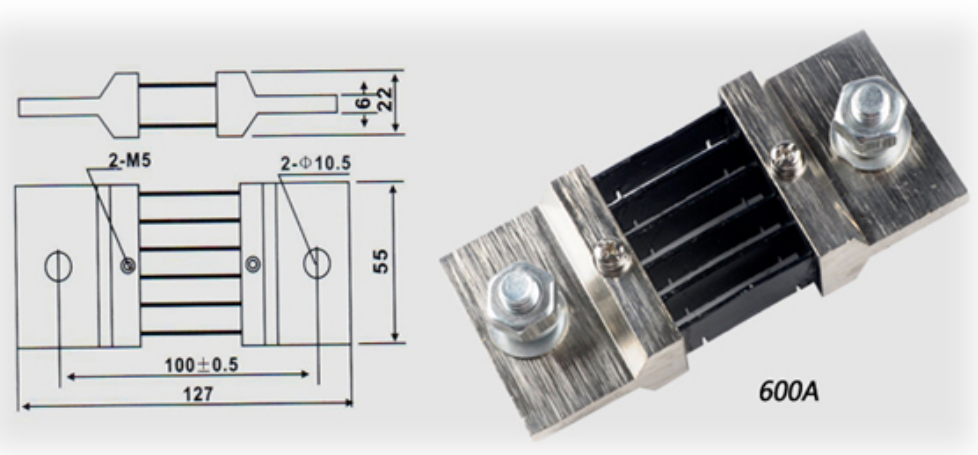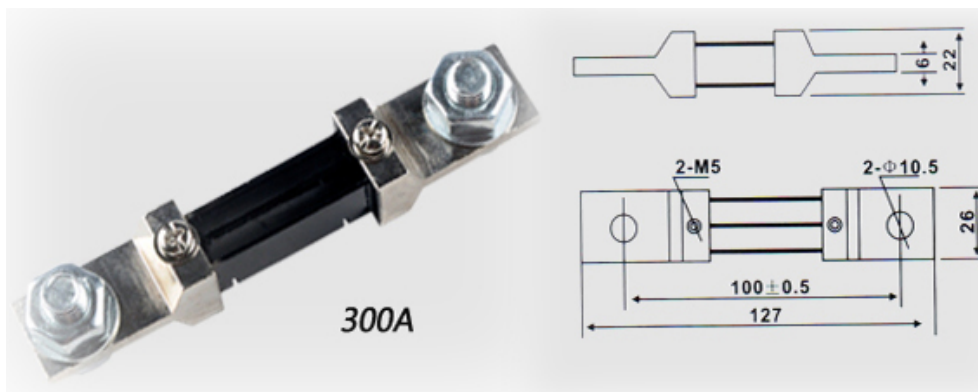

Firmware Upgrades via USB Port

1. Go to <http://www.chargery.com/uploadFiles/ChargeryupdateTool.zip> to download the ChargeryupdateTool.zip, the zip file include Chargery USB driver, and Chargery Update Tool, extract to any disk on the PC.
2. To install the USB driver, run the program X:\ChargeryupdateTool\ChargeryUSBdriver.exe (where X is the drive letter designator.)
3. In the same directory, double click to run the update tool and enter program interface.
4. Connect BMS16Pro to the PC by the USB data cable. When the port number (such as com5) appears, this shows the update tool identified the BMS16Pro. Click OPEN button lock the port please.
5. Click Open file button open the firmware file. If there is no firmware file on the PC, you can download the file on <http://www.chargery.com/uploadFiles/firmwareFiles/> to the PC.
6. Click the Update button, then the update progress bar will appear, update complete will be displayed on PC. BMS16Pro also display the progress bar simultaneously and enter into cell count setup interface automatically after update is completed.

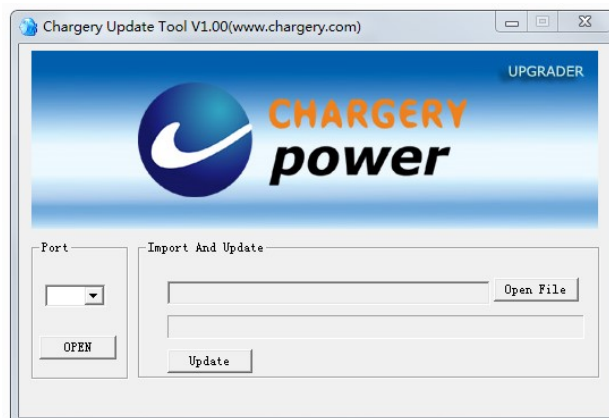

Current Calibration


Press **SET/START** 3 seconds enter into Program Setup and find the Current Calibration, you can calibrate the current to improve the measure accuracy. if exchange the current shunt, you must calibrate current again.

1. Shortly press **SET/START** make the 0A blink
2. Turn off charge and discharge, and shortly press **SET/START** button.
3. Press **SET/START** again and increase calibration current to another value (up to 255) and charge or discharge at the current.
4. Press **SET/START** save calibration data.
5. Press **SET/START** for 3 seconds quit Program Setup.


Typical Connection

There are 2 sockets connecting to battery pack, socket 1 is for 2S-8S and socket 2 for 9S~16S battery.



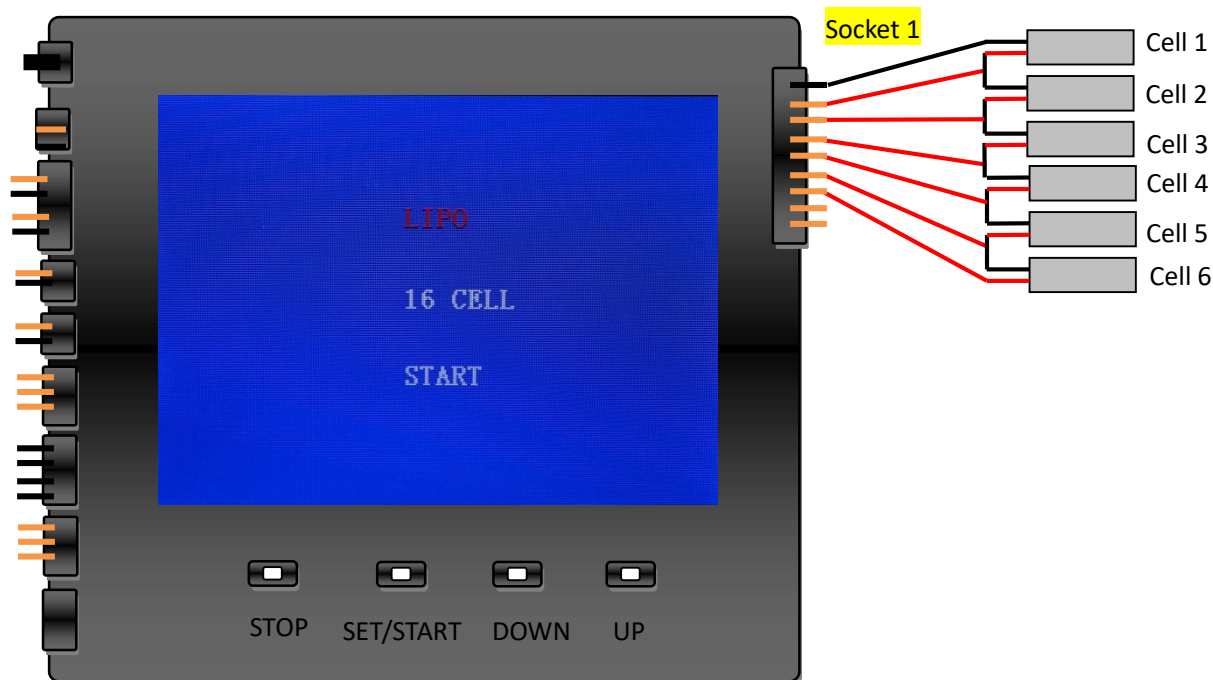

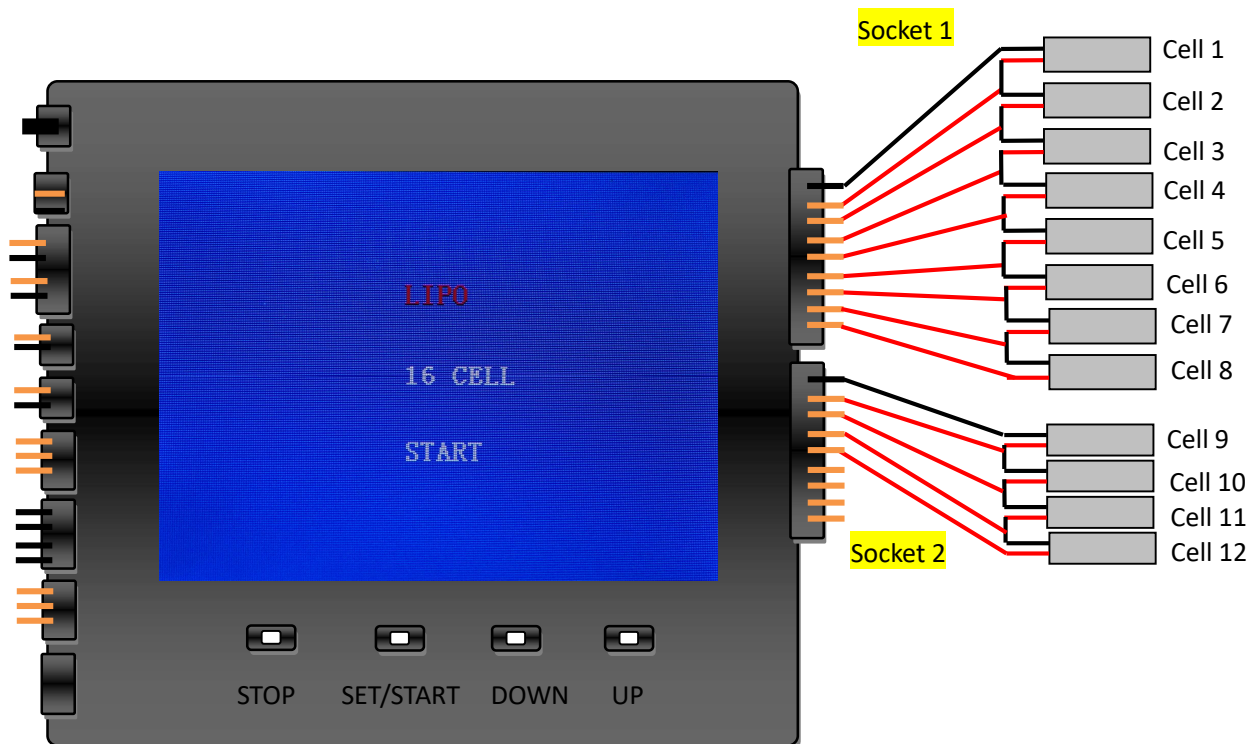


1. 6S battery connect to the socket 1 directly, but external power supply is essential, it is as following.




2. For over 8S battery pack, connect 8S to socket 1 and then socket 2 separately. Take 12S battery sample as following:



Accessory

USB data cable	Battery connection XHR-9PIN, 600mm
	
Temperature sensor, 600mm	Relay controller wire 600mm
	
Warning LED, 300mm	Warning Beeper, 300mm
	
Current sensor wire, 600mm	
	

Current Sensor and Relay Connection

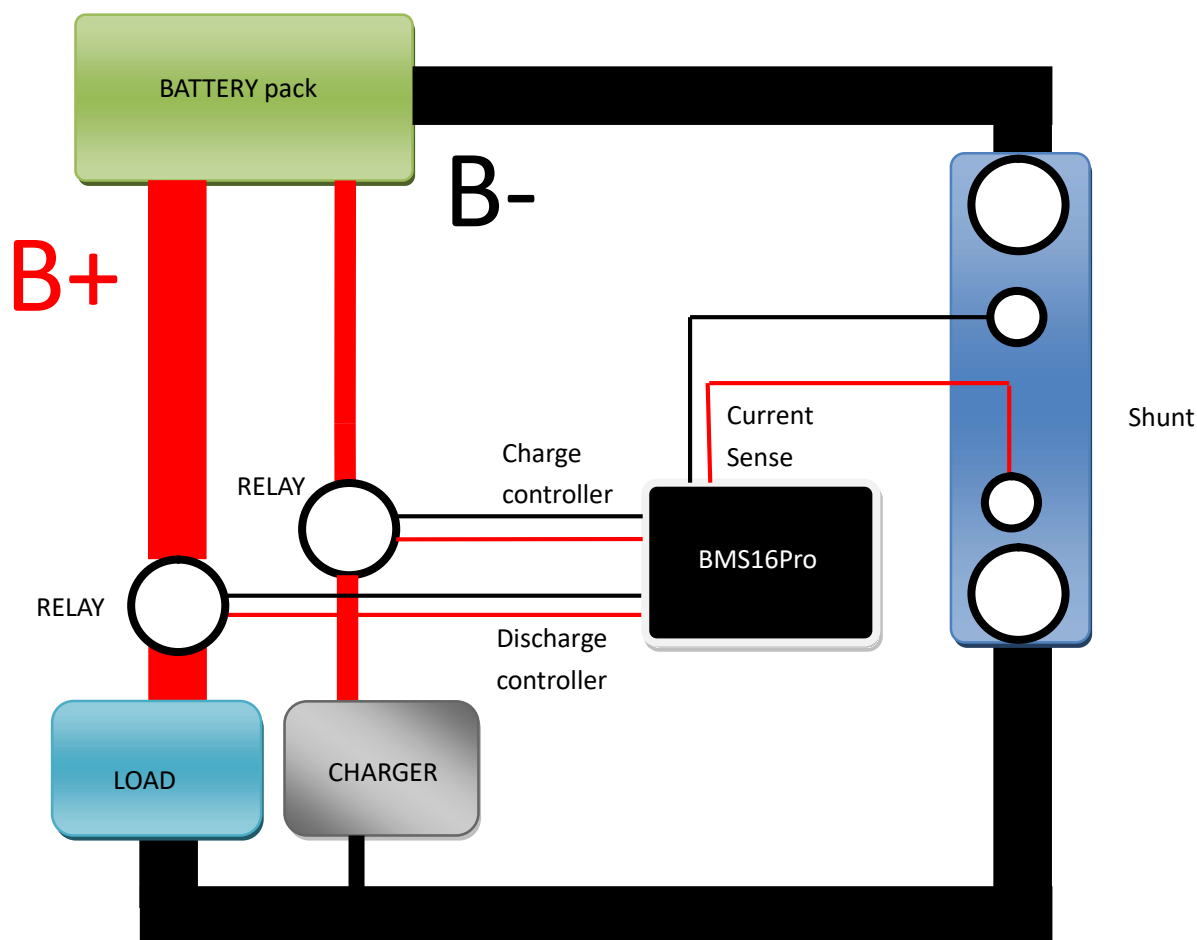

Heavy RED wires are positive of battery pack (B+/B16+), charger and load such as motor, and heavy black wire is negative of battery pack(B-/B1-), charger and load.

Warning

Before connect the relay to charge or discharge controller, please confirm the coil of relay voltage. the BMS controller will output V_{in} to power the coil, if the BMS24 will be powered by external power supply, V_{in} is external power supply output voltage, if powered by battery pack, V_{in} will be battery pack voltage. If the V_{in} is not correct on driving coil, please use voltage regulator to power coil.

Related parts

The following device is related with BMS16Pro

MODEL	DESCRIPTION	COMMENTS
BMS16	For 2S-16S, balance is not available.	
BMS24	For 2S-24S, 1.2A balance current per cell	

Version History

Version	description
V1.04	Released first time



Warranty and Service

Chargery Power Co., Ltd. as manufacture of power system warrants its BMS16Pro and current Sensor to be free of defects in material and workmanship. This warranty is effective for 12 months from date of purchase. If within the warranty period the customer is not satisfied with the products performance resulting from a manufacturing defect, the accessory will be replaced or repaired.

Your selling dealer is your first point of contact for warranty issues. Return postage costs are the responsibility of the user in all cases. Please submit copy of original receipt with the return.

Damage due to physical shock (dropping on the floor, etc.), inappropriate power supply (unstable output voltage and insufficient power, etc.), water, moisture, and humidity are specifically NOT covered by warranty.



Chargery Power Co., LTD.

Chuangye Road, Nanshan Shenzhen, 518054, China.

Tel: 86 (0)755 26436165, fax: 86 (0) 755 26412865

Email: jasonwang3a@163.com

Homepage: www.chargery.com

